## Care and Cleaning

1. Use a dry, soft cloth to dust or wipe carefully.
2. Do not clean with chemicals, solvents, or harsh abrasives.

# TROUBLESHOOTING:

| Problem | Possible Cause | Corrective Action |
|---|---|---|
| The bulb will not light. | The bulb is burned out. | 1. Replace light bulb. |
| | The power is off. | 2. Make sure power supply is on. |
| | Faulty wire connection. | 3. Check wiring. |
| | The circuit breaker is off. | 4. Make sure circuit breaker is to the 'on' position. |
| The fuse blows or a circuit breaker trips when the light is turned on. | There is an exposed wire. | 1. Discontinue use of the fixture.<br>2. Contact a qualified electrician or call the Customer Service Team at 1-877-527-0313. |

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of one (3) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**



# INSTRUCTION MANUAL

## CHESTER ISLAND 2LT WOOD

Home Depot SKU 11962 (UPC 053392119621)
Aruba Teak Finish

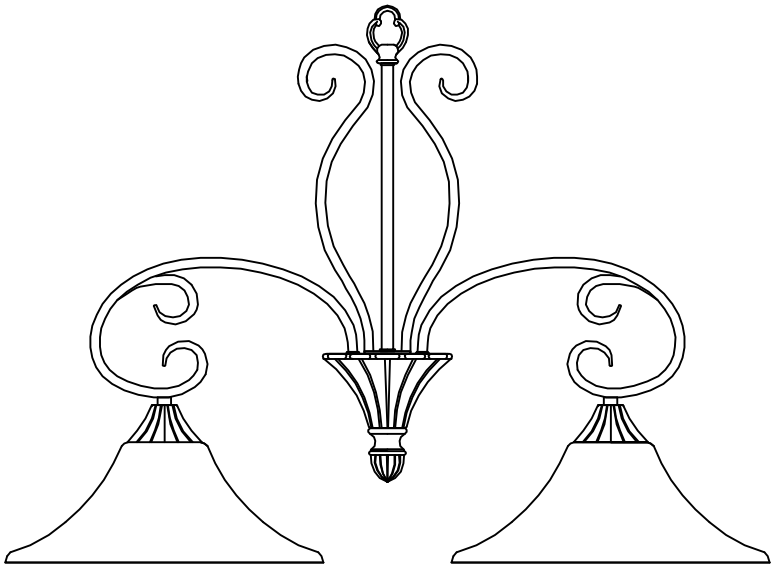

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured to the highest standards of safety and quality.

## QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU 11962 or (UPC 053392119621) when speaking to a Customer Service agent.



## CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse as the fuse box.

**Important:** Inspect the wire insulation for any cuts, abrasions or exposed copper that may have resulted during shipping. If there is a defect in the wire, DO NOT continue the assembly operation. Please call our Customer Service Team at 1-877-527-0313.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU 11962 or (UPC 053392119621).

4. Keep your receipt and these Instructions for Proof of Purchase.

## TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

Safety goggles



Wire Strippers



Wire Cutters



Flathead Screwdriver



Phillips Screwdriver

Electrical Tape

Ladder

100 watt Max. type "A" bulb (not included) (x2)

ADDITIONAL PARTS FOR ASSEMBLY (included):

1. Chain Loop



2. Pole

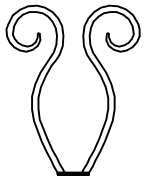

3. Upper Arm Assembly

6. Glass Shade (x2)

7. Socket Ring (x2)



10. Nipple

11. Finial

ASSEMBLT INSTRUCTIONS:

1. Carefully unpack the fixture, lay out all parts on clean surface.

2. The Lower Arms (4) have been turned to lay flat for shipping, turn the Lower Arms (4) carefully so that they are evenly spaced apart.

3. Place Upper Arm Assembly (3) on top of Distributor (8) and secure by screwing Pole (2) to top of the Distributor (8).

4. Screw Chain Loop (1) to top of the Pole (2).

5. Screw Nipple (10) to the Coupling (9).

6. Screw Finial (11) to the Nipple (10).

7. Determine the length of Chain (16) required to hang the fixture at the desired height. using pliers, open one end link of chain and attach to the Chain Loop (1) on top of the fixture. remove or add chain as desired at this time. lace fixture wire and ground wire up through every other link of Chain (16).

GLASS SHADE AND BULB INSTALLATION:

1. Place a Glass Shade (6) over each Socket (5) and secure with a Socket Ring (7).

2. Install a 100 watt max. medium base type "A" bulb (not included) into each Socket (5).



ASSEMBLY:

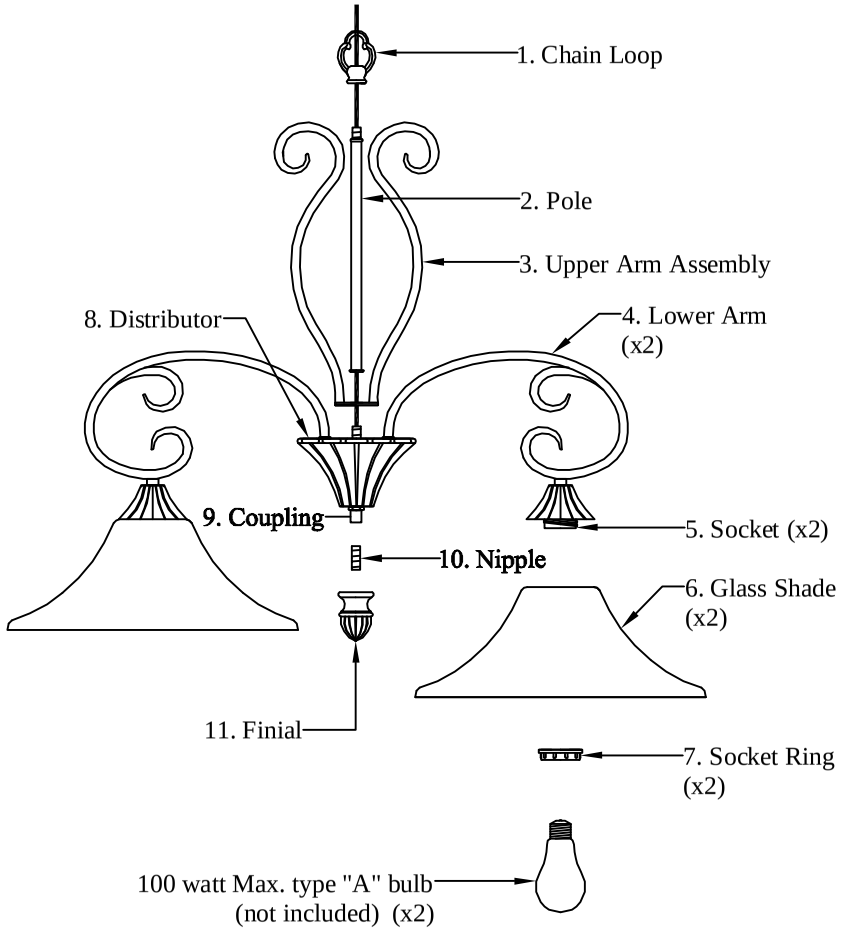

ADDITIONAL PARTS FOR INSTALLATION (included):

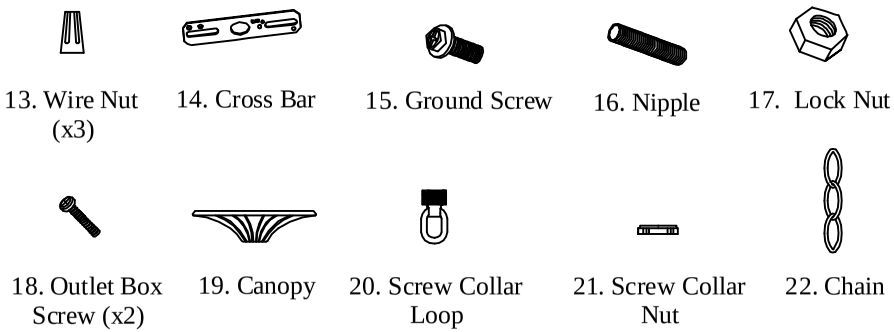

13. Wire Nut (x3)
14. Cross Bar
15. Ground Screw
16. Nipple
17. Lock Nut
18. Outlet Box Screw (x2)
19. Canopy
20. Screw Collar Loop
21. Screw Collar Nut
22. Chain

INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.

2. Install Cross Bar (14) with Nipple (16), Lock Nut (17) and Screw Collar Loop (20) to Outlet Box (12) using two Outlet Box Screws (18).

3. Slide the Screw Collar Nut (21) and then the Canopy (19) onto the end of the Chain (22), then fasten the end link of Chain (22) to the Screw Collar Loop (20).

4. Insert the fixture wires up through the Nipple (16).

5. Install the fixture ground wire under the Ground Screw (15) on the Cross Bar (14), then connect the fixture ground wire to the supply ground wire in the Outlet Box (12) using the Wire Nut (13).
(Refer to Figure #1)

6. Connect the ribbed fixture wire to the white (or ribbed) supply wire in the Outlet Box (12) using Wire Nut (13).

7. Connect the smooth fixture wire to the black (or red) supply wire in the Outlet Box (12) using Wire Nut (13).

NOTE: Alway use Wire Nuts (13) to connect wires and push all excess wires and connections back into Outlet Box (12).

8. Raise the Canopy (19) to the ceiling and secure in place by screwing the Screw Collar Nut (21) onto the Screw Collar Loop (20).



INSTALLATION:

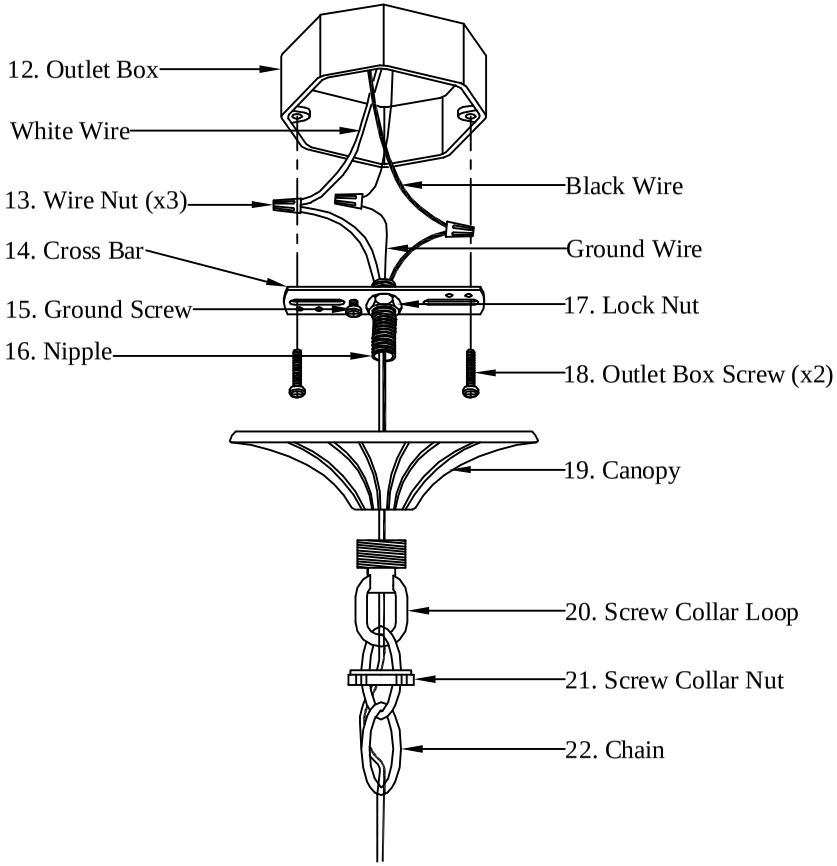


Figure #1